

 
## URO Parts Door Mirror Base Gasket Part# 203 810 6476G and 203 810 4576G

### Removal Instructions:

1. Remove mirror body cover to access mirror attachment.



2. Remove three Phillips head screws and disconnect the electrical plug connector to remove the mirror.
3. Remove mirror base from door.
4. Remove the electrical plug connector noting the plug wire positions by color. Then remove plug housing with electrical plug removal tool.

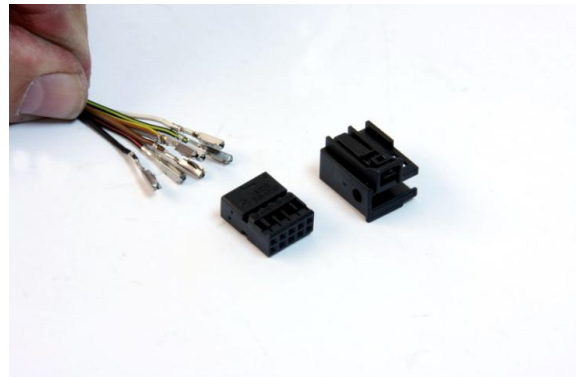

5. Cut through boot as shown. Pull old seal over wire harness end to remove.




## Installation Instructions:


1. Remove new seal from package. (Do not apply petroleum oils as body seals are not resistant to petroleum products.)



2. Insert wiring harness from the back side and pull through until the boot end engages the rubber plug attached to the wire harness.

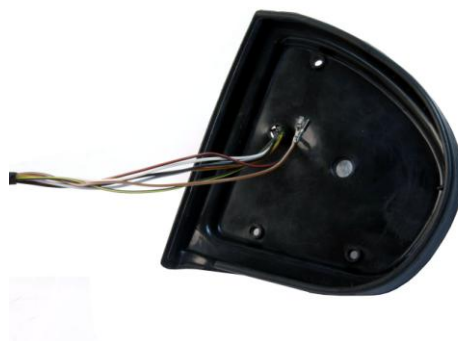

3. Reinstall wire pins in plug housing noting wire color order from earlier.

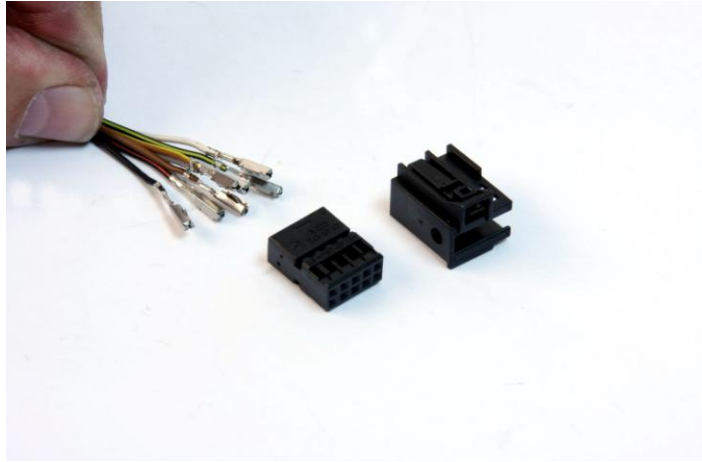

4. Re-plug wire harness and install back on door with three Phillip screws.



5. Reinstall mirror body covers as originally placed.