

URO Parts Door Mirror Base Gasket Part# 210 810 6516G and 210 810 6816G

Removal Instructions:


1. Remove mirror body cover to access mirror attachment.



2. Remove three Phillips head screws and disconnect the electrical plug connector to remove the mirror.
3. Remove mirror base from door.
4. Remove the electrical plug connector noting the plug wire positions by color. Then remove plug housing with electrical pin removal tool.



5. Pull old seal over wire harness end to remove.

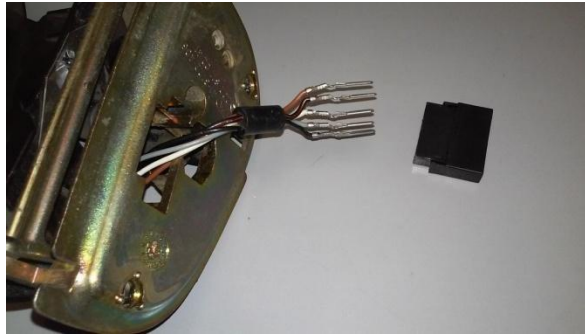

Installation Instructions:

1. Remove new seal from package. (Do not apply petroleum oils as body seals are not resistant to petroleum products.)



2. Reverse the wire harness boot. Push it entirely inside out with your finger making sure not to damage the rubber material.



3. Insert wiring harness from the back side and pull through until the boot end engages the rubber plug attached to the wire harness.



4. Work it slowly through until half of the wire plug length is exposed.



5. Reinstall wire pins in plug housing noting wire color order from earlier. Pull the wires back through in order to pull the plug housing back into position inside the slot in the gasket.



6. Re-plug wire harness and install back on door with three Phillip screws.



7. Reinstall mirror body covers as originally placed.